



A black Quansheng TG-UV2PLUS walkie-talkie with a long antenna and a numeric keypad. The screen displays various status indicators.



Analog

User's Manual

TG-UV2PLUS

泉盛户外系列
黑金刚

 大功率

 多段收发 双显双待

 智能快速充电

 4000mAh
高性能聚合物锂电池

Thank you for purchasing this **QS** Radio. We believe this easy-to-use radio will provide reliable and dependable communication. **QS** Radio incorporates the latest advanced technology. As a result, we know that you will be pleased with the quality and features of this product.

- | | |
|--|--------------------------------------|
| 1.Multiband TX&RX,dual display dual standby | 18.Channel delete |
| 2.H (High) , M (Medium) , L (Low) output power selective | 19.Reset |
| 3.Double frequency, double channel display of the LCD. | 20.Up/down scan function |
| 4.Built-in VOX function | 21.Main/sub channel shift |
| 5.Dual-watch operation | 22.1750Hz call tone |
| 6.Respectively receive/transmit CTCSS/DCS code | 23.Cross-band receiving/transmitting |
| 7.Repeater shift direction set | 24.Squelch level |
| 8.Auto code search | 25.Channel name edit |
| 9.Reverse frequency function | 26.Channel store |
| 10.Voice scrambler | 27.Frequency and channel mode shift |
| 11.Multi channel steps | 28.Keypad lock |
| 12.Frequency deviation setting | 29.Main/sub channel display shift |
| 13.Busy channel lock | 30.Channel scan list |
| 14.Time-out-Timer | 31.200 channels |
| 15.Channel, channel-frequency, channel-name display. | 32.PC Programmable |
| 16.Priority scan | 33.High capacity Li-ion battery |
| 17.Wide/narrow bandwidth | 34.Smart charger |
| | 35.FM Radio (88-108MHz) |

PRECAUTIONS BEFORE USING


- Please read the User's Manual before using. It gives you important information about how to operate the portable radio.
- Please put the radio and accessories where the children can not touch.
- Maintenance can only be performed by professional technicians.
- Please use the standard battery pack and charger in order not to destroy the radio.
- Please use the standard antenna, in order not to shorten the distance.
- Do not expose the radio to sunlight for a long period of time, nor put it near the heat,nor use it in a high temperature environment.
- Do not put it in extreme dust nor wet or on unsteady surfaces.
- Keep it dry. (Rain or moisture will erode the electronic board).
- Do not transmit when the antenna is not installed.
- If you find bad smell or smog, please turn off the radio immediately. And take the battery off the radio, then contact with QS agent.

CONTENTS


SUPPLIED ACCESSORIES -----	1	Channel display mode (DSP)-----	21
CHARGING NOTES(1)(2) -----	2-3	Priority scan (PCH)-----	21-22
ATTACHING/RELEASING		Wide/Narrow bandwidth (W/N)-----	22
THE BATTERY PACK -----	4	Channel delete (DEL)-----	22-23
INSTALLING BELT CLIP -----	5	Reset-----	23
INSTALLING EXTERNAL		Upward/downward scanning-----	23
SPEAKER/MICROPHONE -----	5	Main/sub channel shift-----	23-24
DIAGRAM -----	6-7	Transmitting 1750Hz call tone-----	24
LCD DISPLAY -----	8	Cross-band receiving-transmitting	
BASIC OPERATION -----	9	working shift-----	24
FAST MENU OPERATION FLOW -----	10-13	Squelch level setting-----	25
FUNCTION INSTRUCTION -----	14-29	Channel name edit-----	25
Transmitting output power choose (H/M/L)-----	14	Channel storing-----	26-27
Receiving CTCSS/DCS setting (RC)-----	14-15	Frequency and channel mode shift---	27
Transmitting CTCSS/DCS setting (TX)-----	15	Keypad lock-----	27
Frequency deviation setting (+/-) -----	16	“↓” symbol switch-----	27
VOX function-----	16-17	Frequency band shift-----	28
Research CTCSS/DCS code (RC)-----	17	Scan list-----	28
Reverse (REV)-----	17-18	Jacklight-----	28
Voice scrambler (SCR)-----	18	FM Radio-----	28-29
Dual-watch operation (DW)-----	18-19	PC programmable -----	29
		The annunciation of no transmitting-----	29
		CTCSS list -----	30
		DCS list -----	31
		Specifications -----	32

SUPPLIED ACCESSORIES

Carefully unpack the portable radio. We suggest that you check the following items before you throw away the packing materials.

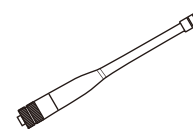

Antenna

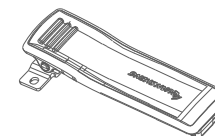

Belt clip



Li-ion battery



Battery charger



Adapter



User's manual

CHARGING NOTES(1)

Charging the battery pack :


- Battery packs are not charged when they are shipped. Charge them before use.
- Initially charging the battery pack after purchase or extended storage (longer than 2 months) will not bring the battery pack to its greatest capacity or its normal charge, which can be done only after repeated charging and discharging two or three times.
- The average use time of battery pack is 16 hours.

CAUTIONS


- After the battery is charged to its highest capacity, and then used on the radio. If the radio still shows low power, please change a new battery pack.
- Do not short-circuit the battery terminals or throw the battery into fire.
- Never attempt to remove the casing from the battery pack.

CHARGING NOTES(2)

- Plug the AC adapter into the back of the charger. Then plug the power cable of the adapter into 220V power.

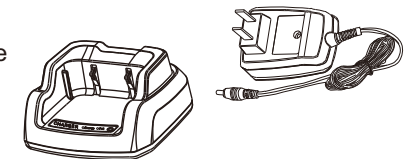


- Slide the Li-ion battery pack or radio with a Li-ion battery pack into the charger.
 - Make sure the battery pack is in connected with the charging terminals.
 - When charging begins, the RED LED light displays. When the battery pack is charged to its greatest capacity, GREEN LED light displays.

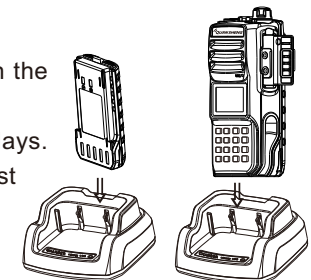

After the GREEN LED light displays, take the battery pack or the portable radio out of the charger.


ATTACHING THE BATTERY PACK

- Slide the battery pack into the back of the radio in the direction of the arrow (), then lock it with the battery release button. Slide the battery pack until the battery release button makes a "clicking" sound.

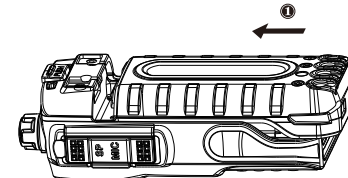


RELEASING THE BATTERY PACK

- Turn off the radio before releasing the battery pack.
- ➊ Push the battery release button in the direction of the arrow () as shown below.
- ➋ The battery pack is then released.

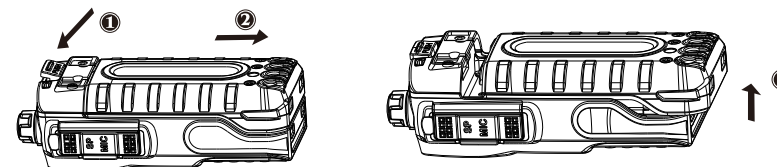

INSTALLING BELT CLIP


- Conveniently attaches to your belt. Attach the belt clip with the supplied screws using a phillips screw driver.

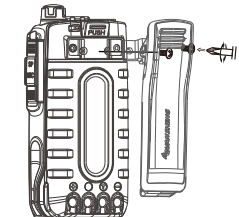



INSTALLING EXTERNAL SPEAKER/ MICROPHONE

- Insert the speaker/microphone plugs into the speaker/microphone jacks.


PS: The radio is not fully rain resistant while using the external speaker/microphone.

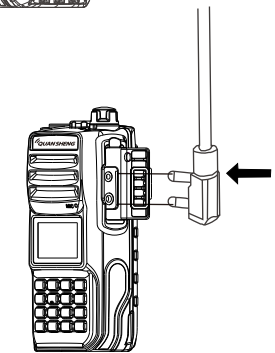

DIAGRAM

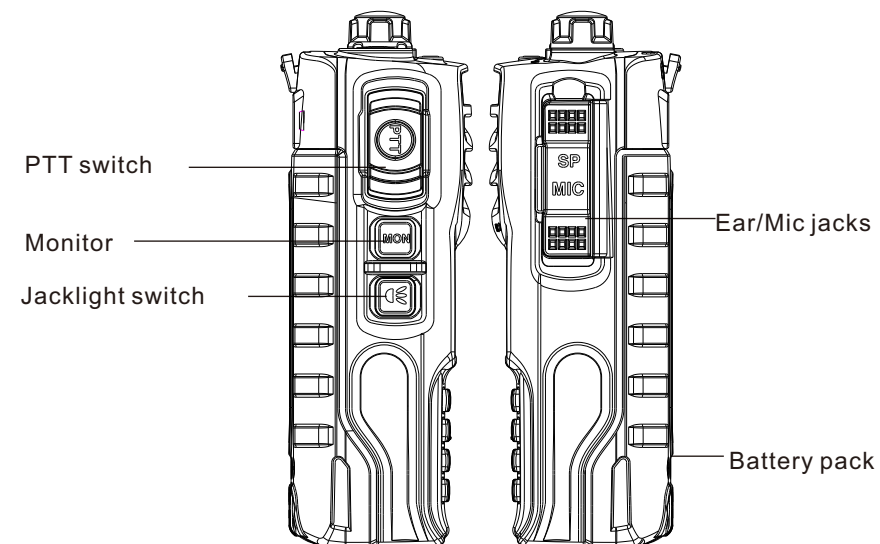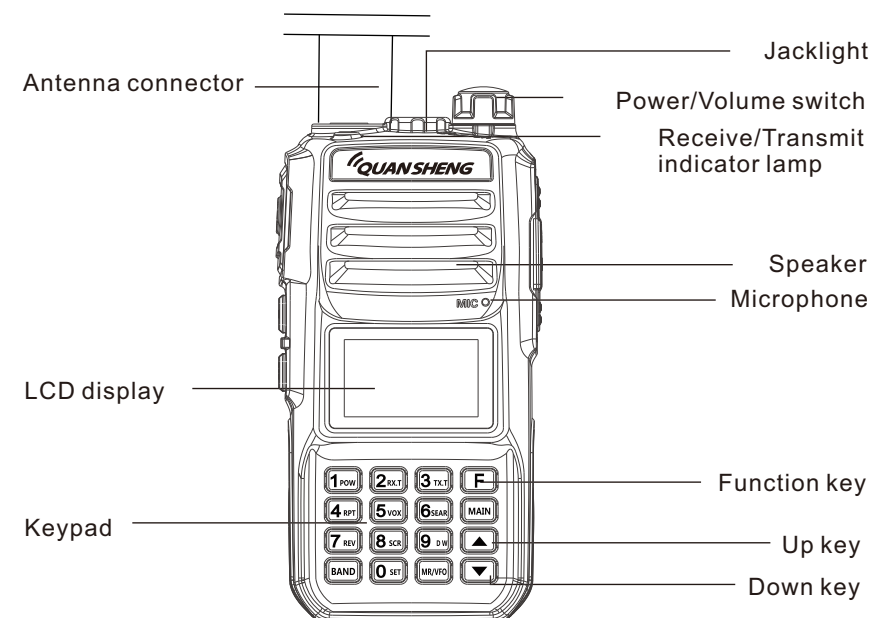

LCD DISPLAY

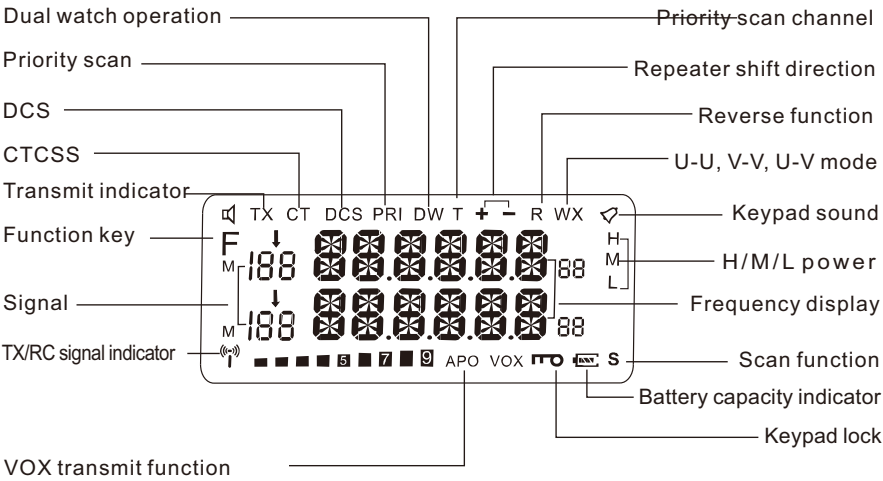

Note:

Battery capacity indicator (Full)

The rest capacity of the battery

The battery is exhausted, please change a new battery or charge the battery

Receive signal indicator


BASIC OPERATION

- Turn the Power/Volume knob clockwise to turn the power on. When you turn it on, it will beep and the channel will display on the LCD. The LCD backlight shows. (P-1)



P-1

- Turn Power/Volume knob counter-clockwise to turn off the radio. (P-2)

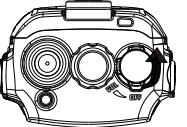


P-2

Note:

Press and hold the Monitor button, then rotate the Power/Volume knob to turn up and down the volume.

- To make a call, press and hold the "PTT" switch, then speak into the microphone in normal speaking tone. Hold the microphone approximately 1.5 inches (3-4cm) from your lips.

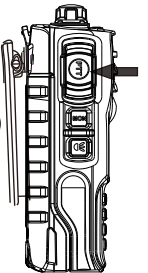

P-3

- Release "PTT" to receive signals. (P-3)

NO.	Feature	Fast key	LCD display	Parameter	Selectable	Confirm	VFO mode	Page
1	Power switch	F+1	→ H/M/L →	Repeatedly press F+1	→ H: (5W) M: (2.5W) L: (1W) →	Auto	→ Auto	P14
2	Receive code	F+2	→ RC.*** →	Press BAND to change the mode and then press ▲ or ▼ to choose	→ CTCSS (67.0-254.1) DCS (D023N-D754N) DCS (D023-D754) →	MR/ VFO	→ Auto	P14 -15
3	Transmit code	F+3	→ TC.*** →	Press BAND to change the mode and then press ▲ or ▼ to choose	→ CTCSS (67.0-254.1) DCS (D023N-D754N) DCS (D023-D754) →	MR/ VFO	→ Auto	P15 -16
4	Frequency deviation	F+4	→ + - →	Repeatedly press F+4	→ +/-/No display →	Auto	→ Auto	P16
5	VOX function	F+5	→ VOX.* →	Press ▲ or ▼	→ 1-9 level/OFF →	MR/ VFO	→ Auto	P16 -17
6	Code search	F+6	→ RC.*** →	Press BAND to change mode	→ CTCSS (67.0-254.1) DCS (D023N-D754N) DCS (D023-D754) →	Press MR/VFO confirm. Press F+MR/ VFO channel store	→ PTT	P17
7	Reverse	F+7	→ R →	Repeatedly press F+7	→ R/No display →	Auto	→ Auto	P18

No.	Feature	Fast key	LCD display	Parameter	Selectable	Confirm	VFO mode	Page
8	Voice scrambler	F+8	SCR. **	Press ▲ or ▼	ON/OFF	MR/VFO	Auto	P18
9	Dual watch-operation	F+9	DW	Repeatedly press F+9	DW: ON Nodisplay: OFF	自动	F+9	P18 -19
10	Channel step	F+0+1	STP.***	Press ▲ or ▼	5/6.25/10/12.5/ 15/20/25/30/50/ 100KHz	MR/VFO	F or PTT	P19
11	Frequency deviation	F+0+2	0.000 ₀₀	Input numbers directly	0-69.995MHz choose	MR/VFO	F or PTT	P20
12	Busy lock	F+0+3	BCL. **	Press ▲ or ▼	ON/OFF	MR/VFO	F or PTT	P20
13	Time-Out-Timer	F+0+4	TOT. **	Press ▲ or ▼	1-9 level, 60s/ level OFF	MR/VFO	F or PTT	P21
14	Channel display mode	F+0+5	DSP. **	Press ▲ or ▼	CH/FR/NA three kinds of mode	MR/VFO	F or PTT	P21
15	Priority scan	F+0+6	PCH. *	Press ▲ or ▼	Any channel can be stored.	MR/VFO	F or PTT	P21 -22

NO.	Feature	Fast key	LCD display	Parameter	Selectable	Confirm	VFO mode	Page
16	Wide/narrow bandwidth	F+0+7	→ W/N *	→ Press  or 	→ W: 25k N: 12.5k	→ MR/VFO	→ F or PTT	P22
17	Channel delete	F+0+8	→ DEL *H	→ Press ▲ or ▼ or input numbers directly	→ Any channel be stored	→ Press twice MR/VFO	→ F or PTT	P22-23
18	Reset	F+0+9	→ RESET	→ 	→ Press MR/VFO, it will display "RUST". ? to remind you whether you want to delete.	→ Press MR/VFO again	→ F or PTT	P23
19	Upward scanning	F+▲	→ S	→ Press ▲ or ▼	→ Upward	→ 	→ PTT	P23
20	Downward scanning	F+▼	→ S	→ Press ▲ or ▼	→ Downward	→ 	→ PTT	P23
21	Main/sub channel shift	F+MAIN	→ Top/bottom rows display shift	→ Repeatedly press F+MAIN	→ Main/sub	→ Auto	→ Auto	P23-24
22	Sending 1750 signal	F+PTT	→ TX 1750	→ Repeatedly press F+PTT	→ Only this	→ Auto	→ Auto	P24
23	Cross-band receive/transmit	F+LED	→ WX	→ 	→ Any setting within frequency range	→ Auto	→ F+LED	P24
24	Squelch level	F+MON	→ SQL. *	→ Press 	→ 0-9: 9 Levels 0: Lowest 9: Highest	→ MR/VFO	→ Auto	P25

NO.	Feature	Fast key	LCD display	Parameter	Selectable	Confirm	VFO mode	Page
25	Channel name edit	F+BAND	→ _Glitters	→ Press  or  press BAND to enter the next letter	→ Letters (A-Z) Numbers (0~9) Symbols (+ * - /)	→ MR/VFO	→ Auto	P25
26	Channel store	F+MR/VFO	→ SAV**H	→ Press  or  to directly input number	→ Press MR/VFO, it will display "SAVE". ? to remind you whether to store	→ MR/VFO again	→ Auto	P26-27
27	Frequency channel mode shift	MR/VFO	→ F * and channel shift	→ Repeatedly press MR/VFO	→ Channel/Frequency	→ Auto	→ Auto	P27
28	Keylock	Press F long	→ 	→ 	→ Press F for more than 2 seconds, you may keylock or unlock	→ Auto	→ Auto	P27
29	"↓" shift	Press MAIN	→ "↓" up/down row shift	→ 	→ "↓" indicates main channel	→ Auto	→ Auto	P27
30	Frequency bands shift	Press BAND	→ Shift between F0,F1,F2,F3,F4	→ Press BAND	→ F0 to F4	→ Auto	→ Auto	P28
31	Scan list additive	F+MR/VFO	→ S	→ F+MR/VFO	→ Displays: ON Not Displays: OFF	→ Auto	→ F+MR/VFO	P28
32	Jacklight		→ 	→ ON/OFF	→ ON/OFF	→ Auto	→ Auto	P28
33	FM Radio	Directly input when on frequency mode	→ F0-F4	→ Program by computer or direct input	→ Frequency range 88-108MHz	→ Auto	→ Auto	P28-29

FUNCTION INSTRUCTION

NOTICE

- This model has double-frequency-display function. On frequency mode, it can show two different receiving and transmitting frequencies at the same time; on channel mode, it can display two different channels and their related parameters at the same time.
- On frequency or channel mode, press "MAIN" to shift between main channel and sub channel. If "↓" points to main channel, then all of the operations are processed with main channel frequency or channel; if "↓" points to sub channel, then all of the operations are processed with sub channel frequency or channel.

Transmitting Output Power Choose (H/M L)-----Menu 1

Using this function may choose the transmitting output power.

1. On frequency mode, press (F) and (2x), the LCD will displays as picture 1.
2. Operating it repeatedly may shift between (H) 5W, (M) 2.5W, (L) 1W.
3. When setting is finished, it would be back to standby state automatically.

↑ 06 400.025^H
M 01/ 36.025⁰⁰
↓

Picture 1

NOTICE

- On channel mode, the output power may be changed directly. But changing channels or turn the power on, it will make it back to the initial setting.
- Choosing high power may improve the calling quality; low power may lower the radiation and usage of battery.

Receiving CTCSS/DCS Setting (RC)-----Menu 2

Using the function may set your personal private and prevents disturbance from others or matching with the code of other radios.

1. On standby mode, press (F) + (2x), the LCD will displays "RC.***" (as picture 2)
2. Press (BAND) to change CTCSS/DCS, press OFF to turn it off.
CTCSS: 67.0-254.1
DCS: N023-N754 (Normal DCS)
DCS: I023-I754 (Inverse DCS)
3. Press (▲) or (▼) to choose the code.
4. After setting, press (M) to confirm, then it will automatically turn back to the standby mode.

↑ RC.off^H
M 01/ 36.025⁰⁰
↓

Picture 2

NOTICE

- There are 50 groups DCS and 208 Normal/inverse DCS. See the attached list (P30-P31).
- On each channel, CTCSS/DCS may be used and set together.

Transmitting CTCSS/DCS Setting (TX) -----Menu 3.

Using the function may set your personal private and prevents disturbance from others or matching with the code of other radios.

1. On standby mode, press (F) + (3x), the LCD displays "TC.***" (as picture 3).
2. Press (BAND) to shift between CTCSS/DCS (see Menu 2).
↑ tC.off^H
M 01/ 36.025⁰⁰
↓
3. Press (▲) or (▼) to select.
4. After setting, press (M) to confirm, and then it would automatically return to standby mode.

Picture 3

NOTICE

- There are 50 groups CTCSS and 208 Normal/inverse DCS. See attached list (P30-31).
- On each channel, CTCSS/DCS may be used together.

Frequency Deviation Setting (+/-)-----Menu 4

This function is a way used with repeater or other working stations.

1. On frequency mode, press (F) + (4^{REV}), the LCD displays as picture 4.
2. By operating it repeatedly, you may select frequency deviation mode between (+) (-). Frequency deviation mode.
 - a. If trasmitting frequency is higher than receiving frequency , it is normal direction (+).
 - b. If trasmitting frequency is lower than receiving frequency, it is inverse direction (-).
 - c. Signal without (+) (-) means it has no setting.
3. After setting, the system will confirm automatically

M 06 400.025^H
M 01 36.025^{BP}

Picture 4

NOTICE

- ❖ Select correct frequency deviation direction according to the station you use.
- ❖ This function is invalid under channel status.

VOX Function-----Menu 5

When this function is on, the system will inspect your talking to the microphone and then it will automatically shift to transmitting mode without manual operation. This function is more convenient for headset users.

1. On standby mode, press (F) + (5^{VOX}) to enter, the LCD displays as picture 5.
2. Press (▲) or (▼) to choose VOX level, which has levels (OFF~9), OFF. (1) is the lowest level, (9) is the highest level.
3. After setting is finished, press (M^{YES}) to confirm, then the system will automatically return to standby mode. (LCD displays as picture 6).

↑ vox 3^H
M 01 36.025^{BP}

Picture 5

M 06 400.025^H
M 01 36.025^{BP}

Picture 6

NOTICE

- ❖ The higher the level is , the higher the sensitivity of microphone is.
- ❖ When scanning, FM radio or dual watch, this function is invalid.

Research CTCSS/DCS Code (RC)-----Menu 6

Using this function may search and store the CTCSS/DCS code other radios send. When other stations has the same frequency but different CTCSS/DCS.

1. On frequency mode, press (F) + (6^{RC}) to enter, the LCD displays "RC.***" . (as picture7).
2. Code scanning is started.
3. Press (BAND) to change the code mode, after searching the code, it would stop automatically.

Code mode: CTCSS: 67.0-254.1 (CTCSS)
DCS: NO23-N754 (Normal DCS)
DCS: I023-1754 (Inverse DCS)
4. After setting, press (M^{YES}) to confirm. Press (PTT) to return to standby mode.

↑ Rc.670^H
M 01 36.025^{BP}

Picture 7

NOTICE

- ❖ If one of the code modes doesn't search code, press (BAND) to change the code mode and search again.
- ❖ If you want to store to channel mode, press (F) + (M^{YES}) (see Menu 26).

Reverse (REV)-----Menu 7

When using this function, the receiving and transmitting frequency will reverse, together with the CTCSS/DCS set.

1. On standby mode, press (F) + (7rev) to enter, the LCD displays "R". (as picture8)
2. Operating it repeatedly means turning on or off.
3. After setting, the system will confirm automatically, and return to standby mode.

M 06 400.025⁰⁰
M 01 / 36.025⁰⁰

Picture 8

NOTICE

- REV is available only when in different frequencies. This function is invalid when in the same frequency.

Voice Scrambler (SCR)-----Menu8

This function may guarantee the secrecy of your talk, that is: when in voice scrambler talking, other radios without voice scrambler can receive your signal but can't hear your talking content.

1. On standby mode, press (F) + (8scr) to enter, the LCD displays "SCR.OFF".
2. Press (▲) or (▼) to choose "ON" or "OFF".
3. After setting, press (REV) to confirm and it would automatically return to standby mode.

NOTICE

- Communication is available only when two radios have voice scrambler at the same time.
- Voice scrambler board is needed before voice scrambler.

Dual Watch Operation (DW)-----Menu9

Example: Main channel frequency is 460.125MHz, sub channel frequency is151.235MHz. Want to set dual watch, operates it as following:

1. On standby mode, press (F) + (9dw) to enter, the LCD displays DW (as picture 9).
2. Repeatedly press (F) + (9dw), you may choose "ON" or "OFF".
3. After setting, the system will automatically confirm. At this time, the main and sub channels have been in dual-watch.

M 05 460.125⁰⁰
M 02 / 151.235⁰⁰

Picture 9

4. If you want to return to standby mode, press + , the LCD will not show "DW".

Example: Main channel frequency is 460.125MHz, sub channel frequency is151.235MHz. Want to set dual watch, operates it as following:

1. On standby mode, press (F) + (9dw) to enter, the LCD displays DW (as picture 9).
2. Repeatedly press (F) + (9dw), you may choose "ON" or "OFF".
3. After setting, the system will automatically confirm. At this time, the main and sub channels have been in dual-watch.
4. If you want to return to standby mode, press (F) + (9dw), the LCD will not show "DW".

M 05 460.125⁰⁰
M 02 / 151.235⁰⁰

Picture 9

NOTICE

- If any channel or frequency receives signal, you must reply in 7 seconds. Otherwise the radio will return to dual-watch mode.
- If sub channel doesn't receive a signal, only the main channel can transmit normally.
- You should exit this function before changing the data and information of other frequencies and channels.

Channel Step (STP)-----Menu 10

Using this function may choose the correspond step frequency to the radio you want to set .

1. On standby mode, press (F) + (0sc) + (1row) to enter, the LCD displays "STP.***".
2. Press (▲) or (▼) to choose. There are 5/6.25/10/12.5/15/20/25/30/50/100khz to choose.
3. After setting, press (REV) to confirm. Press (F) or PTT to return to standby mode.

NOTICE

- On channel mode, this function setting is invalid.

Frequency Deviation-----Menu 11

Using this function, you may set deviation between receiving and transmitting.

Generally, only repeaters use this. The frequency deviation of this radio is : 0-69.995MHz

1. On standby mode, press **(F)**+**(Q)**+**(Z)** to enter, the LCD displays "0.00000".
2. Press numbers to input the frequency deviation you want to set. If you want to input 5MHz, input 0,5,0,0,0.
3. After setting, press **(MR)** to confirm. Press **(F)** or **【PTT】** to return to standby mode.

NOTICE

- Setting direction of frequency deviation, please see Menu 4.

Busy Channel Lock (BCL)-----Menu 12

When this function is on, you may prevent interrupting other radios that are talking. If the selected channel is being used by other radios, when you press **【PTT】**, the radio you use will beep, and LCD displays "BUSY". Release the **【PTT】**, "BUSY" will disappear and return to receiving mode.

1. On standby mode, press **(F)**+**(Q)**+**(3)** to enter, the LCD displays "BCL.***".
2. Press **(▲)** or **(▼)** to choose "ON" or "OFF".
3. After setting, press **(MR)** to confirm, press **(F)** or **【PTT】** to return to standby mode

NOTICE

- The turning-on of this function may affect your normal talk.

Time-Out-Timer (TOT)---Menu 13

This function is to limit the continuous long-time transmitting. When the continuous transmitting time exceeds the time you set, the transmitting will be stopped, and you will hear a beep, LCD displays "OVER" (as picture 10).



Picture 10

1. On standby mode, press **(F)**+**(Q)**+**(4)** to enter, the LCD shows "TOT.***".
2. Press **(▲)** or **(▼)** to choose time-limit level. The TOT of this radio may set 60-540seconds, and has 1-9 grades, level 1 is 60 seconds, level 2 is 120 seconds, infer from this. OFF is turning off.
3. After setting, press **(MR)** to confirm. Press **(F)** or **【PTT】** to return to standby mode.


Channel Display Mode (DSP)-----Menu 14

Using this function may choose the LCD display in your favor.


1. On channel mode, press **(F)**+**(Q)**+**(5)** to enter, the LCD displays "DSP.***"
2. Press **(▲)** or **(▼)** to choose, there are 3 display ways to choose.

- a. CH: channel number display (as picture 11).
- b. FR: channel frequency+channel number display (as picture 12).
- c. NA: channel name+channel number display (as picture 13).


3. After setting, press **(MR)** to confirm, press **(F)** or **【PTT】** to return to standby mode.



Picture 11



Picture 12



Picture 13

NOTICE

- This function is invalid on frequency mode.
- The display of channel name can't be shown until channel name edit is finished, otherwise it would display as channel number. For steps of channel name edit, please see Menu (25).

Priority Scan (PCH)-----Menu15

Using this function may monitor the channel and frequency usage of other radios and check the activity of a prior channel/frequency.

Example: if the radio sets 5 channels, you want to set CH-00 as priority channel.

1. On channel mode, press **(F)**+**(Q)**+**(6)** to enter, the LCD displays "PCH.***".
2. Press **(▲)** or **(▼)** to choose "0" channel. LCD displays "PCH.0" or directly input number 0,0,0.

3. After setting is finished, press  to confirm. Press  or **【PTT】** to return to standby mode.
4. If you want upward priority scan, press  +  + . LCD displays "PRI.T". LCD channel displays: 00→01→00→02→00→03
- If you want downward priority scan, Press  +  + . LCD displays "PRI.T". LCD channel displays: 00→05→00→04→03→02

NOTICE 

- ⦿ This function is invalid in frequency state
- ⦿ Scanning steps may refer to Menu (19)、(20).

Wide/Narrow Bandwidth (W/N)-----Menu 16

- This fuction is used to set the working band of radio.
1. On standby mode, press  +  +  to enter, the LCD displays "W/N.*".
2. Press  or  to choose W(wide 25k) or N(narrow 12.5K). After setting, press  to confirm. Press  or **【PTT】** to return to standby mode.

NOTICE 

- ⦿ The radio normally uses wide band.

Channel Delete (DEL)-----Menu17

- This function is used to delete channels and information of the radio.
1. On channel mode, press  +  +  to enter, the LCD displays "DEL. 0H"
2. Press  or  to choose the channel you want to delete, or directly input number.
- Example: If you want to delete CH-01, then input 0,0,1.

3. After setting, press  to confirm, it would remind you whether you would delete. LCD displays "DEL ?"
4. If you want to delete, press  to confirm again.



Picture 14

RESET---Menu18

1. On standby mode, press  +  +  to enter, the LCD displays "RESET" (as picture 14).
2. Press  to confirm, it will remind you whether to reset. LCD displays "SURE?"
3. If you want to reset, press  to confirm

NOTICE 

- ⦿ After resetting, the channels and information that the radio has stored will all be deleted and return to VFO mode.

Upward/Downward Scanning-----Menu 19&20

Using this function may monitor the frequency of other radios, and check the activity of a certain channel frequency.

1. On frequency mode, press  +  or  is general scanning. According to the step frequency you set, you may scan upward or downward.
2. On channel mode, press  +  or  is general scanning. According to the channel you set, you may scan upward or downward. Press  again, you may shift to priority scan.

NOTICE 

- ⦿ For priority scan, refer to Menu 15.

Main/Sub Channel Shift-----Menu 21

Using this function may shift between main and sub channels when in frequency or channel mode. On standby mode, press (F)+(MAIN), the frequency or channel will shift the top or bottom row. But the "↓" of the upper row main channel will not shift, the frequency/channel that "↓" shows is still the main channel. (as picture 15)




Picture 15

Transmitting 1750Hz Call Tone-----Menu 22

This function is used to turn on a transmitting signal by European users.

Cross-Band Receiving/Transmitting Working Shift-----Menu 23

- 1. On standby mode, press (F)+LED, the LCD displays "WX" (as picture 16). "↓" shows receiving frequency. Without "↓" is transmitting frequency.
- 2. Press (MAIN) to shift.
- 3. Then press (F)+LED to exit the setting of this function.
Example: If the frequency of main channel is 138.875, the frequency of sub channel is 468.875.
- a. Press (F)+LED, "↓" shows on main channel 138.875 (as picture 17). Now 138.875 is receiving frequency, while 468.875 is transmitting frequency.
- b. Press (MAIN), "↓" shows on sub channel 468.847 (as picture 18) shows.
Now 468.875 is receiving frequency, 138.875 is transmitting frequency.



Picture 16



Picture 17



Picture 18


NOTICE

- FM radio: Only receiving is acceptable, see the FM radio frequency details Menu 33.
- Once this function is on, other functions are invalid until you exit, and you'll hear "beep".

Squelch Level Setting-----Menu 24

This function makes the squelch level "ON" or "OFF" via choose the signal level of radio.

- 1. On standby, press key (F) +【MON】, the LCD will display "SQL *" (as picture 19).
- 2. Press key (▲) or (▼) to choose the squelch level from 0-9.



Picture 19

NOTICE

- Setting the high squelch level will make failure receiving of weak signal, contrarily, it will be interfered by other noise or signal if the squelch level is too low.

Channel Name Edit-----Menu 25

This function can enable you to edit your desired letters on the channel storing mode, it's convenient to distinguish other users.

- 1. On the main channel mode, press (F)+(BAND). (as picture 20).
- 2. Press (▲) or (▼) to choose the character, and then press (BAND) to set next character.
The channel name makes up of the following:
26 letters: A - Z 10 numbers: 0 - 9 4 symbols: (-) (+) (*) (/)
- 3. Press (MPS) to confirm and return to the standby mode.



Picture 20

NOTICE

- The channel name can edit as many as 6 characters. (Any 1-6 characters of channel name is acceptable).
- Choose the (-) symbol means this character is empty.
- For channel name display see Menu 14.

Channel Storing-----Menu 26

When the radio on the frequency working and standby mode, input the desired frequency and parameters.

- 1. Press key (F)+(MR/VEP), the LCD will displays"SAV**H". (as picture 21).
- 2. Press key (▲) or (▼) to choose the channel number.
- 3. Press key (MR/VEP) to save or not, the LCD will displays"SAVE?". (as picture 22).
- 4. Press key (MR/VEP) to save again.

Example: Channel 3 (same frequency).
Receiving frequency: 466.675MHz CTCSS: 71.9KHz
Transmitting frequency: 466.675MHz CTCSS: 71.9KHz
Channel 5 (different frequency)
Receiving frequency: 465.575MHz
Transmitting frequency: 460.575MHz CTCSS: 88.5KHz
First, storing channel 3:


- a: The radio on frequency working mode, input key 4、6、6、6、7、5 ordinal.
- b: Press key (F)+(2xx), and then press key (BAND) to enter the CTCSS mode(see Menu 2). Press (▲) or (▼) to choose the receiving CTCSS 71.9, then press key (MR/VEP) to confirm.
- c: Press key (F)+(3xx), and then press key (BAND) to enter the CTCSS mode(see Menu 3). Press (▲) or (▼) to choose the transmitting CTCSS 71.9, then press key (MR/VEP) to confirm.
- d: Press key (F)+(MR/VEP), and then press (▲) or (▼) to choose the channel number "SAV.3H".
- e: Press key (MR/VEP) again to confirm. It doesn't operate the b and c step if you don't set the CTCSS.

Next, storing channel 5:

- a: The radio on frequency working mode,input key 4、6、5、5、7、5.
- b: Press key (F)+(5xx), and then press key (BAND) to enter the CTCSS mode
- c: Press (▲) or (▼) to choose the transmitting CTCSS 88.5, and then press key (MR/VEP) to confirm.



Picture 21



Picture 22

- d: Press key (F)+(4HPT) repeatedly until the repeater shift direction shows (-). (see Menu 11).
- e: Press key (F)+(0HPT)+(2xx), and then input key 0、5、0、0、0 ordinal.
- f: Press key (MR/VEP) to confirm.
- g: Press key (F)+(MR/VEP),and then press (▲) or (▼) to choose the channel number "SAV.5H".
- h: Press key (MR/VEP) again to confirm.

NOTICE ⚠

● Press key (MR/VEP) to shift the radio between frequency and channel mode after setting.

Frequency and Channel Mode Shift-----Menu 27


This function is mainly shift the frequency and channel mode of the radio.
Press key (MR/VEP) each time, the radio will shift between frequency and channel mode.

NOTICE ⚠

● The frequency and channel mode shift can be done only when the LCD shows a" ↓ "symbol.

Keypad Lock-----Menu 28

Press key (F) more than 2 seconds, keypad lock; operate again, keypad unlock. (as picture 23).



Picture 23

" ↓ "Symbol Switch-----Menu 29

Press key (MAIN) each time, the " ↓ "symbol will display in turn between the main frequency/channel and sub-frequency/channel. Next you can change the frequency or data such as frequency、channel number、output power、CTCSS/DCS code and so on.

Frequency Band Shift-----Menu 30

This function is convenient to choose the frequency band of the radio.

- 1. On the frequency mode,press key  each time to choose the frequency band. The LCD displays "F*".
- 2. The display of the frequency band: F0→F1→F2→F3→F4→F0.....

The frequency band range as follows:
F0: 88-108MHz F1: 136-173.995MHz F2: 350-389.995MHz
F3: 400-469.995MHz F4: 470-519.995MHz

NOTICE 

ⓘ Pls choose the exact frequency band, if you exceeds the frequency range, the radio will return to the original.

Scan list-----Menu 31

Using this function can choose the channel you setting is to scan or not.

- 1. On the channel mode, press key + , the LCD displays "S", it means the channel accept scan.
- 2. Press key + again to exit, the LCD will not displays"S", it means the channel you choose is not in scanning.

NOTICE 

ⓘ For scan function see Menu 15、19、20.

Jacklight-----Menu 32


Press key the jacklight turn on; operate it again, the jacklight turn off.

FM Radio-----Menu 33


On the frequency mode, input the FM frequency of the radio, the FM frequency range:

88-108MHz.Example: FM frequency: 88.1MHz

- 1. On the frequency mode (F0-F4). (as picture 24).
- 2. Input number key 0、8、8、1、0、0 directly. (as picture 25).



Picture 24



Picture25

NOTICE 

ⓘ The FM frequency also can be stored in the channel.

PC Programmable

The radio can be programmed by computer. For operation details see QS PC software.

The Annunciation Of No Transmitting

- 1. If busy channel lock, LCD displays "BUSY".
- 2. If PLL unlock, LCD displays "LOST".
- 3. If the battery voltage is lower than normal, LCD displays "LOW".
- 4. If Time-Out-Timer, LCD displays "OVER".
- 5. If it is in the frequency: 470-519.995MHZ, LCD displays "DIS".

SPECIFICATIONS

GENERAL			
Frequency range	136-174MHz, 400-480MHz		
Frequency	5PPm		
sensitivity	DC7.2V (rechargeable Li-ion battery)		
Rated Voltage	200 channels		
Memory channel	Inductively loaded antenna		
Antenna disposition	50Ω		
Antenna impedance	Same frequency single operation or different frequency single operation		
Working manner	110mmX56mmX37mm		
TRANSMITTER		RECEIVER	
Output power	10W	Sensitivity	-122dB(12dB SINAD)
Modulation mode (wide/narrow)	16KØF3E/11KØF3E	Audio frequency power	0.5W
Maximum	<5k/<2.5kHz	Audio distortion	<10%
Spurious radiation	<7uW	Blocking	≥85dB
Modulation character	6dB	Intermodulation(wide/narrow)	≥60dB ≥55dB
Emission current	<2.8A(H10)	Adjacent channel selectivity	≥65dB ≥60dB
CTCSS/DCS deviation(wide/narrow)	0.75kHz±50Hz, 0.37kHz±30Hz	Spurious rejection	≥65dB
Modulation sensitivity	12mV		
Modulation distortion	<5%		

■ All stated specifications are subject to change without notice or obligation.